




www.VillageLighting.com

ADJUSTABLE MANTLE HANGER™


MODEL #: V-20909 Series | Patent No. US 11,486,538

PARTS

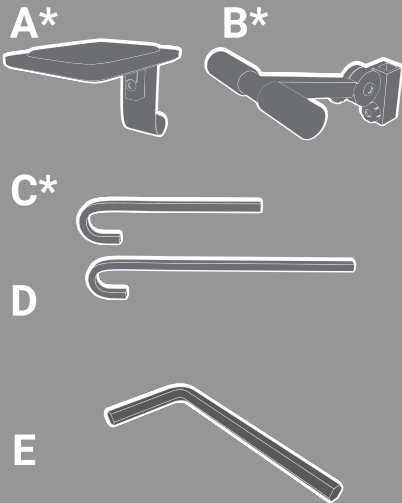

*Parts come pre-assembled

SCAN HERE FOR VIDEOS & PRODUCT SUPPORT

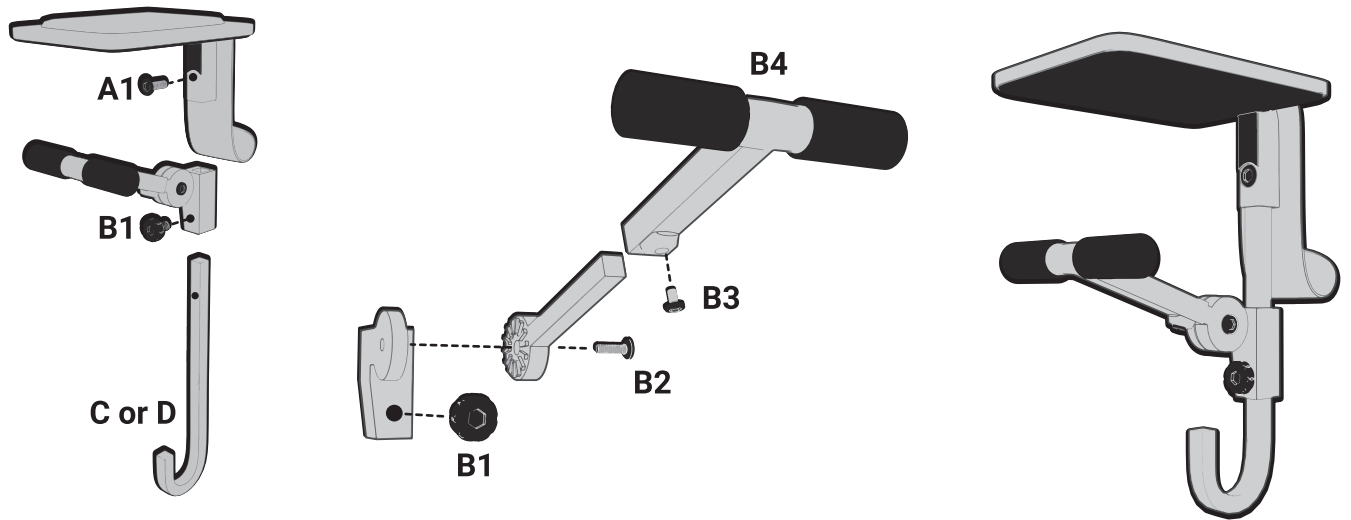


HOW IT WORKS

THE HANGER DOES **NOT** SQUEEZE OR CLAMP YOUR MANTLE. THE WEIGHT OF YOUR DECOR PULLS DOWN ON THE TOP PAD AND PUSHES ON THE BOTTOM PADS TO KEEP THE HANGER SECURE.

THE MANTLE HANGER IS DESIGNED TO SUPPORT WEIGHT PULLING DOWN, NOT WEIGHT PULLING TO THE SIDE OR FRONT.

SEE NEXT PAGE FOR PROPER USAGE EXAMPLES.

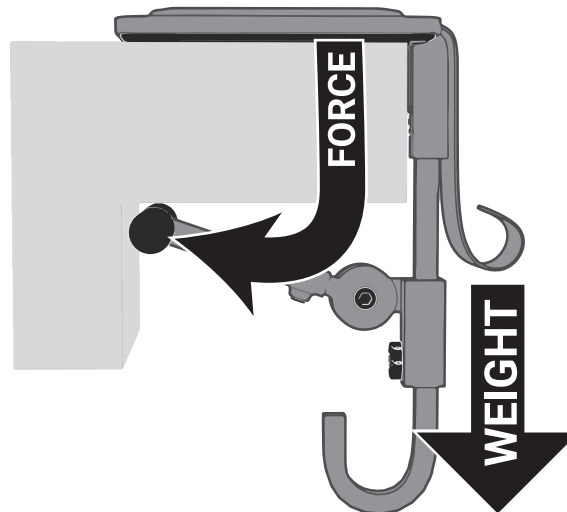


HOW TO ADJUST IT

Remove this screw completely to switch rods (Part A1, C & D)

Loosen this screw to extend the lower pads. (Part B3)

Loosen this bolt to rotate the lower pads. (Part B2)

Loosen this bolt to move the lower pads up and down or remove them to exchange rods. (Part B1)

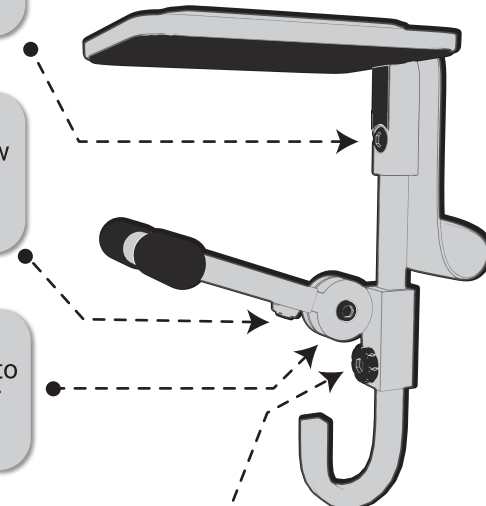

REMEMBER TO TIGHTEN AFTER YOU ADJUST



ADJUSTABLE MANTLE HANGER™


MODEL #: V-20909 Series | Patent No. US 11,486,538



SWAPPING PARTS C & D

1


COMPLETELY REMOVE PART A1 AND PULL OUT THE ROD (C OR D)

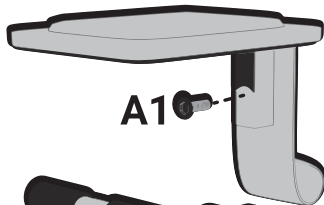

A1

2


LOOSEN BOLT B1 AND SLIDE OFF THE ROD.

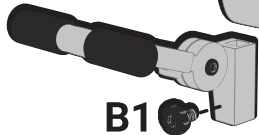







B1

3

SLIDE PART B ONTO THE NEW ROD, THEN REATTACH TO PART A. SCREW IN PART A1 TO SECURE.

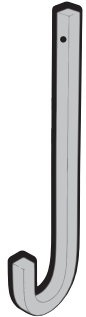

PROPER VS IMPROPER FITTING EXAMPLES

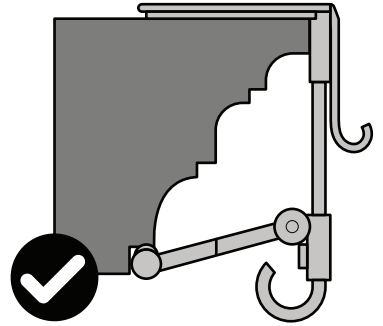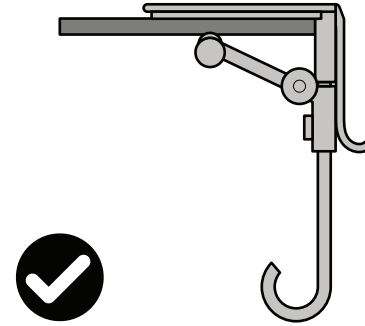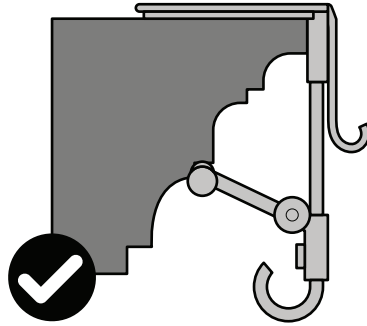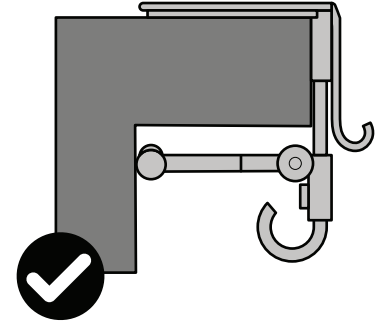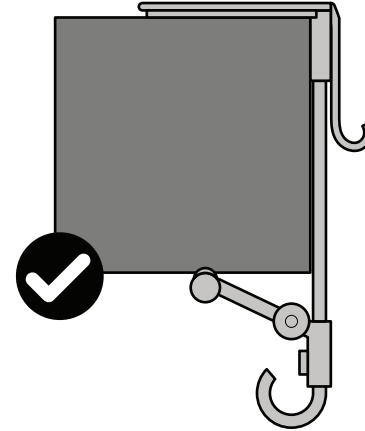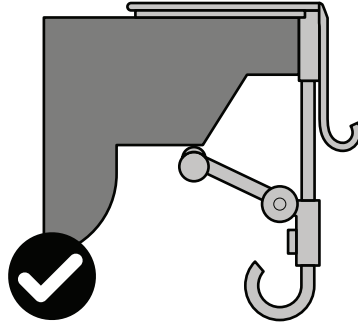

⚠ WARNING

DO NOT pull in a lateral (side to side or front) direction from your mantel. The Mantle Hanger™ could fall and this may result in injury.

